# Instructions for



## 951SXe LONER®

## Temperature Controlled Soldering Station



- Accurate linear temperature control dial
- New and modern illuminated design for better visibility and to better indicate power on/off
- F/C display
- Easy to maintain and calibrate with external calibration features
- Modular sponge tray
- Wide variety of soldering and SMT CROWN® tips available
- · RoHS compliant
- ESD safe
- 18 month warranty

## **Package Contents**

951SXe Temperature Controlled Soldering Station includes LT375 Tip

Station includes L

PD528 Tool Pod

SH235 Modular Sponge Tray with RS200

Round Cleaning Sponge

WP556 WIGAPRY® Mini Screwdriver

and Calibration Aid Tool



Front Right Side View



Warning: Do not hit or tap the soldering tool. The ceramic heater element may break

#### **Tip Cleaning**

To maintain proper Tip to Ground resistance

- 1. Remove Tip from Heater Assembly.
- 2. Using a ST707 Solder Tool Maintenance Brush, clean Tip and Heater Barrel.
- 3. Install the tip and tighten RS372\* Retaining Sleeve. Take note of the gap to ensure proper fitting.



## Tip Care

- 1. Set desired temperature. Blinking Neon Lamp means Tool is ready.
- 2. TIN the Tip. (apply solder)
- **3.** Do not rub, bend or reshape the Tip.
- 4. Always clean the Tip by wiping it against the moist RS200 Sponge or EA439 Dry Tip Cleaner and always RE-TIN with the LT-1 Tip Tinner and Cleaner.



- 2. Using a clean and well tinned Tip, apply a small amount of solder on the Tip, just
- enough to form a bead on top of the Tip.
- 3. Place the center of the thermocouple wire of the SDS100 on top of the bead.
- 4. Again, apply a small amount of solder on the center of the thermo-couple wire, just enough to embed the center.
- 5. Adjust LO-Temp Calibration Pot so the Meter will read 400°F (205°C).
- **6.** Set Temperature Control Knob to 800°F (427°C).
- 7. Adjust Hi-Temp Calibration Pot so the Meter will read 800°F (427°C).

#### **MS412**

Digital Temperature For a quicker calibration for more than one Measurement System station try using the TP475 Temperature Probe FX635 TI680

\* To avoid transferring debris back to your clean tip make sure you clean the RS372 retaining sleeve with the ST707 solder tool maintenance brush and replaces the RS200 sponge frequently.


## **Changing Tip**

- **1. IMPORTANT:** Make sure your tool is cool.
- 2. Turn Retaining Sleeve counter-clockwise to remove.
- **3.** Remove old Soldering Tip.
- **4.** Insert new Tip.
- 5. Install Retaining Sleeve. (should be "finger" tight only)

WARNING: Do not use the soldering tool if soldering tip is loose. This will cause the heater element to break.

Soldering Tips Iron Plated for long life-Nickel and Chrome Plated for optimum heat transfer Contact Edsyn for more tip selections	Width A	Length B
LT375 LONER Spade Soldering Tip	.06" (1.5mm)	.48" (12.2mm)
LT376 LONER Spade Soldering Tip	.12" (3.0mm)	.48" (12.2mm)
LT394 LONER Spade Soldering Tip	.07" (1.8mm)	.93" (23.6mm)
LT374 LONER Conical Soldering Tip	.03" (0.8mm)	.48" (12.2mm)
LT382 LONER Conical Soldering Tip	.02" (0.5mm)	.62" (15.8mm)
LT392LF LONER Conical Soldering Tip	.01" (0.3mm)	1.13" (28.8mm)
LT429 LONER Conical Soldering Tip	.02" (0.5mm)	.74" (18.8mm)
LT446LF LONER Conical Soldering Tip	.03" (0.8mm)	.48" (12.2mm)
LT337BC LONER Heavy Duty Soldering Tip	.10" (2.5mm)	.74" (18.8mm)

#### SET-UP AND REQUIRED FOR SPADE CONICAL AND HEAVY DUTY TIPS

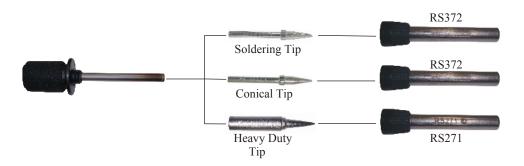


## 951SXe Exploded View

#### **Tool Pod Maintenance**

#### Replace SC581 Solder Collector

- 1. Hold Thermal Housing (1A) firm and turn Front Housing (1C) counter-clockwise and pull it apart.
- 2. Remove used (1B) and replace with a new one.
- 3. Reassemble (1A) to (1B) (for

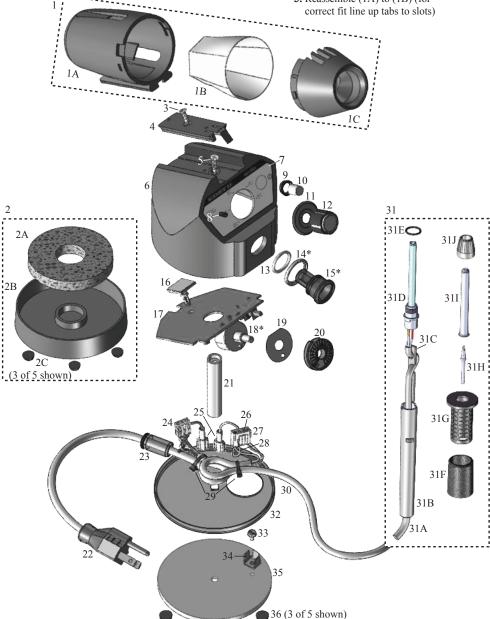

\*14 (Ring) and 15 (Bushing Lens) must be installed on 29 (Tool Cord) before 28 (Cable Tie) is installed to make loop.

**3**7

\*18 (Panel Pot) is included when you order 17 (Circuit Board Assembly)

## 951SXe Spare Parts List

ITEM NO.	PART NO.	DESCRIPTION	QTY. NEEDED
1	PD528	Tool Pod (includes SC581)	1
1A	SR042	Thermal Housing for Tool Pod	1
1B	SC581	Solder Debris Collector	1
1C	SR043	Front Housing for Tool Pod	1
2	SH235	Modular Sponge Tray Holder (includes RS200 round cleaning sponge)	1
2A	RS200	Round Cleaning Sponge	1
2B	SR1225	Sponge Tray	1
2C	SR251	Rubber Feet (Set of 4)	1.25 set
3	SR367	Phillips Flat Head Screw	1
4	SR784	Single Dovetail Track	1
5	SR772	Phillips Flat Head Screw	1
6	SR1200	Housing for Soldering Station	1
7	SR1201	Front Panel Label	1
8	SR1226	Front Panel Mount Light Pipe	1
9	SR1202	Switch Button Lens Ring	1
10	SR1203	Round Chrome Switch Cap	1
11	SR1205	Dial Face Lens Cover	1
12	SR1204	Black Control Knob	1
13	SR1208	Silicone O-Ring	1
14	SR1207	Ring for Tool Cord Bushing Lens	1
15	SR1206	Tool Cord Bushing Lens	1
16	SR1224	Locking PCB Support	1
17	SR1223	Circuit Board Assembly	1
18*	SR1211	5K Wire-Wound Panel Pot	1
19	SR1210	Background Washer for Dial Face	1
20	SR1209	Dial Face Lens	1
21	SR1212	Base Post Enclosure	1

<sup>\*</sup> Included when ordering circuit board assembly

## 951SXe Spare Parts List Con.

ITEM NO.	PART NO.	DESCRIPTION	QTY NEEDED
22	SR1221	Power Cord Assembly	1
23	SR1222	Power Cord Bushing Lens	1
24	SR432	3 Circuit Housing Connector (Set of 3)	.3 set
25	SR495	Female Fully Insulated Connector (Set of 5)	.4 set
26	SR415	Terminal Crimp (Set of 10)	.3 set
27	SR1213	Insulated Display Housing Connector	1
28	SR445	Black Wire	.16ft
29	SR1214	Cable Tie	2
30	SR059	Tool Cord	1
31*	SR1215	Hollow Heater Soldering Tool, Complete Assembly	1
31A	SR525	Static-Safe Silicone Black Hose	.43ft
31B	SR057	Handle	1
31C	SR1229	Strain Relief	1
31D	SR060	Hollow Heater Assembly Kit (includes SR062, SR064, and Shrink Sleeving)	1
31E	SR062	O-Ring	1
31F	SR063	Vinyl Sleeve	1
31G	SR064	Snap-on Collar	1
31H	LT375	LONER Spade Soldering Tip	1
31I	RS382	Retaining Sleeve	1
31J	RB386	Retaining Bushing	1
32	SR1216	Clear Lens Base Cover	1
33	SR1217	Hex Screw	1
34	SR1220	3 Terminal Ground Lug	1
35	SR1218	Metal Base	1
36	SR251	Rubber Feet (Set of 4)	1.25 set
37	SR1219	Flat Head Screw	1

<sup>\*</sup> Also included are items 30,29,28,27,26,15,14, and 13.

## **Specifications**

Power Requirements 120V, 60Hz

Power Rating 15W - 220W

Heater Rating 120V, 95W

**Temperature Range** 400°F-800°F/205°C-427°C

**Temperature Regulations**  $\pm 6^{\circ}\text{F}/\pm 3^{\circ}\text{C}$ 

**Tip-to-Ground Voltage** 

**Leakage/Resistance** < 2mV/< 2 ohms

**Overall Dimension** 4.11"W x 6½"H x 4"D

104 mm x 166mm x 102 mm

**Weight** 2.12bs (.96 kg)

#### Warranty

Edsyn stands behind its products. We warrant that new tools will be free from defects for 18 months from the date of purchase. During this time period Edsyn will repair or, at its option, replace the tool at no charge. This warranty does not include tips and accessories. Any tool that appears to have been deliberately abused, altered, or destroyed is not covered by this warranty.

## **Technical Support**

Contact our Customer Service for assistance related to the purchase of this product or recommendations on a challenge that you may encounter. There are many replacement parts that are available to keep your tool in top condition. To speak to someone in Customer Service, call 818-989-2324.

©Copyright 2013 by EDSYN®, Inc. All Rights Reserved

No part of this publication, including individual icons, may be reproduced or utilized in any form or by any means without the written permission of EDSYN®, Inc.



Design, color, weight, and material subject to change without notice. Components from other designs may be used with information pertaining to it, but not applicable to another use.

Labels and instructions will supersede this information.



Phone: 818-989-2324 • FAX: 818-997-0895 Email: info@edsyn.com • Internet: www.edsyn.com Address: 15958 Arminta St, Van Nuys, CA 91406

Form, 951SXe