

JBC

www.jbctools.com



Adjustable Nano Tweezers

Ref. AN115-A

Packing List

The following items should be included:

Adjustable Nano Tweezers 1 unit
 Ref. AN115-A

Manual..... 1 unit
 Ref. 0022396



Features

Control unit
 Ref. NAE-1C
 NAE-2C
 NAE-9C


Steady Nano Tweezers
 Ref. AN115-A



Changing cartridges


Save time and change cartridges safely without switching the station off.

1. Removing

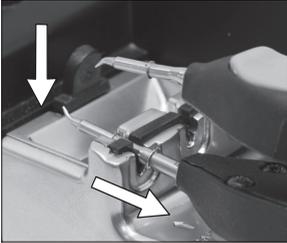


Place the tool in the slot and pull to remove the cartridge.

2. Inserting

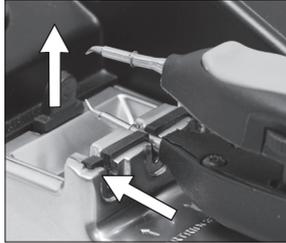

Push the cartridge into the tool to the mark*.

* Important

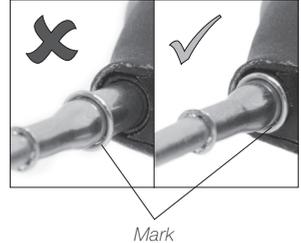


For a proper connection insert the cartridges as far as the mark.

Aligning cartridges

Use the alignment systems to better suit the component to work.

Tip aligner

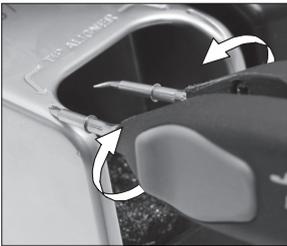


Fit the tip into the aligner and turn to the desired position.

Vertical cartridge alignment




Turn the screw of the tweezers for a vertical alignment of the cartridges. One tip lines up with the other.

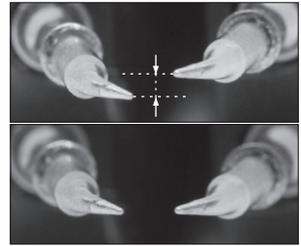

Compatible cartridges

The **AN115-A** works with **C115** cartridges. Find the model that suits your needs in www.jbctools.com

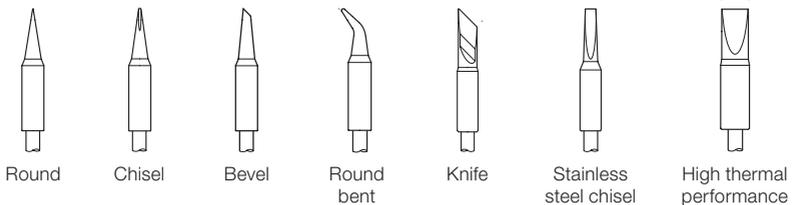

Specifications

- Net Weight: 50 gr (0.1 lb)
- Cable length: 120 cm (47.2 in)

Complies with CE standards.
ESD protected.

JBC

Warranty

JBC's two year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour. Warranty does not cover product wear or misuse. In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.

Register your warranty within 30 days of purchase in www.jbctools.com/productregistration



This product should not be thrown in the garbage.

In accordance with the European directive 2012/19/EU, electronic equipment at the end of their life must be collected and returned to an authorized recycling facility.



Manual in other languages available on our website

www.jbctools.com