

JBC

www.jbctools.com



Micro Tweezers

Ref. PA120-A

Packing List

The following items should be included:

Micro Tweezers
Ref. PA120-A



Manual



Features

Control Unit
Ref. DI, DDE, DME, CP



Stand
Ref. PA-SD



C120 Cartridges
(Required but not supplied)




Micro Tweezers
Ref. PA120-A



Changing cartridge


Turn the station off and follow these guidelines for a safe cartridge change:

1. Removing

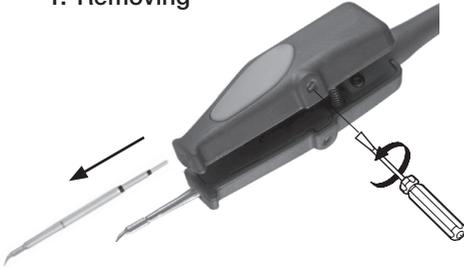


Loosen the screw and remove the cartridge.
⚠ Use a flat pliers if the cartridge is still hot.

2. Inserting

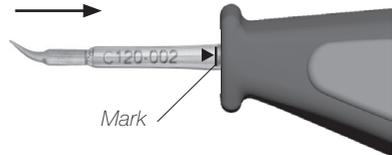

Important: Insert the cartridge to the mark for a proper connection.

3. Aligning

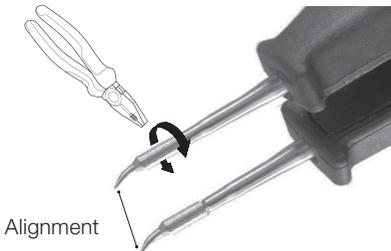

Use a flat pliers for a safe tip alignment.
⚠ Do not over-tighten the screw.



4. Fixing



Important: Tighten the screw. This is necessary for the tool to function.

Compatible cartridges

The PA120-A Micro Tweezers works with C120 cartridge range. Find the model that best suits your soldering needs in www.jbctools.com

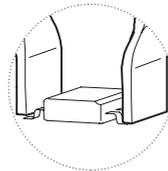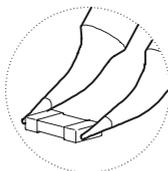

Specifications

- Maximum power per cartridge: 40W
- Weight without cartridges: 102 g
- ESD Safe

JBC

Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear due to use or mis-use.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.



This product should not be thrown in the garbage.

In accordance with the European directive 2002/96/EC, electronic equipment at the end of their life must be collected and returned to an authorized recycling facility.