


The JBC logo is displayed in a bold, red, sans-serif font at the top center of the image.

[www.jbctools.com](http://www.jbctools.com)

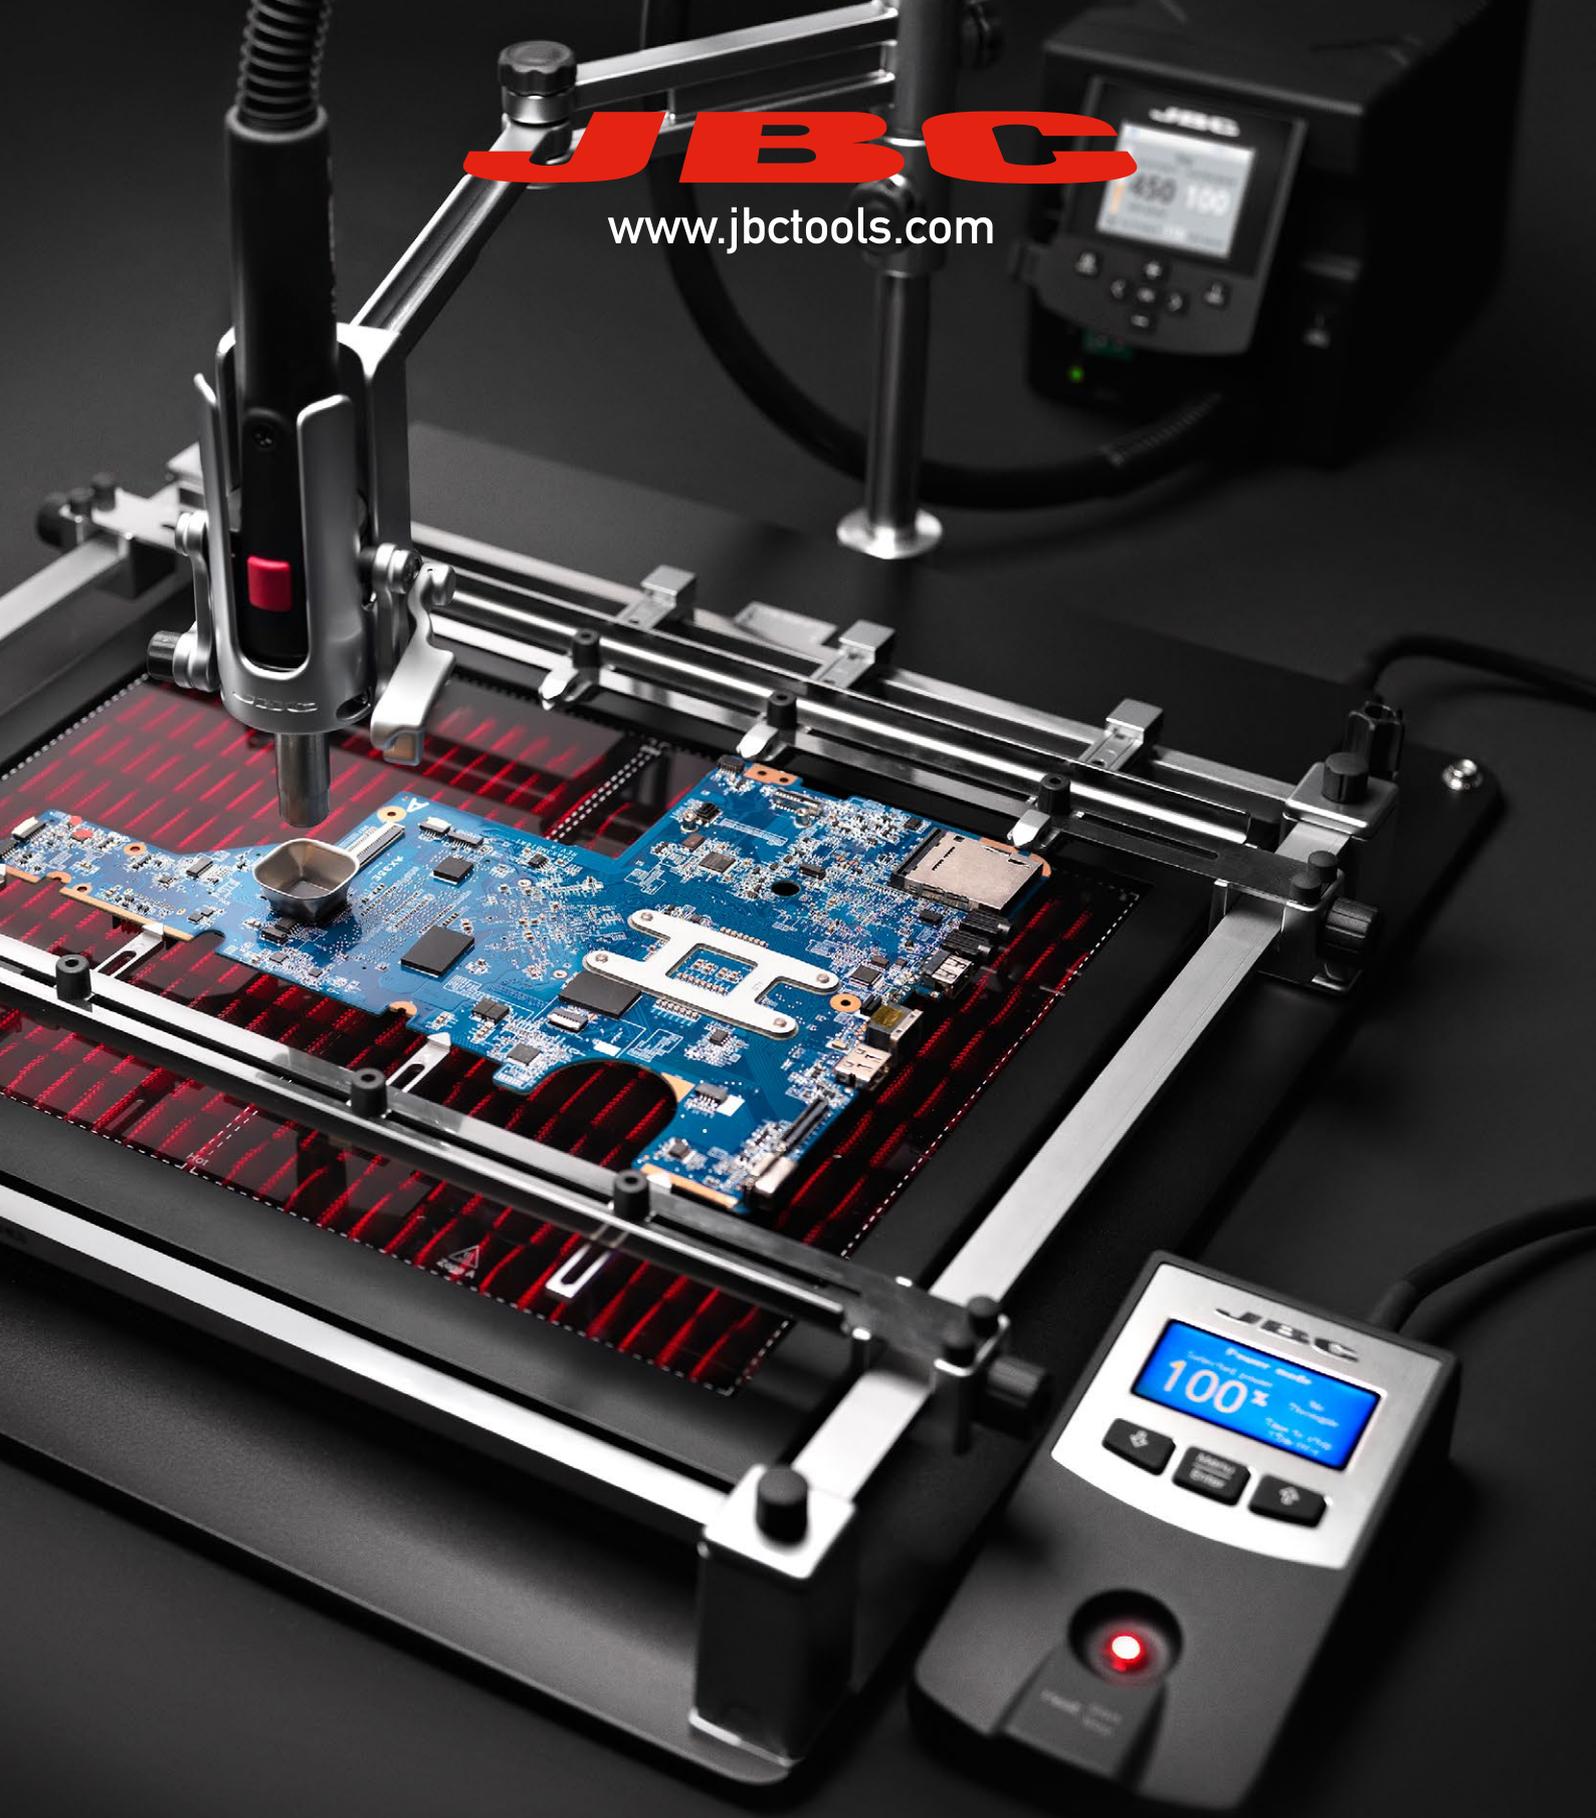

**Repair** under control

The fastest desoldering ever seen

# Hot Air Stations

Use hot air to repair any SMD and even the largest QFPs and PLCCs  
An average-sized integrated QFP can be desoldered in **20 seconds**

## Precision Hot Air Station

Ref. **TESE-1A** 120 V  
**TESE-2A** 230 V  
**TESE-9A** 100 V

To repair small and medium SMDs quickly and safely. Supplied with the **TE-TB** heater set, the stand **TE-SD** and the extractor desk **0008752**.

## Hot Air Stations without the extractor desk

Ref. **TESE-QA**  
Ref. **JTSE-QA**

## Hot Air Station

Ref. **JTSE-1A** 120 V, **JTSE-2A** 230 V, **JTSE-9A** 100 V

High-powered stations for repairing all kinds of SMD components. Supplied with the **JT-TA** heater set, the stand **JT-SD** and the extractor desk **0008752**.



## For a quick and safe desoldering


### Desk

Ref. **0008752**

With JBC's exclusive system which uses hot air and a wide range of extractors / protectors, you can desolder quickly and at the same time protect the surrounding components by concentrating the heat on the selected component.

### 1. Placing

Choose the extractor, tripod or protector which best fits the component.

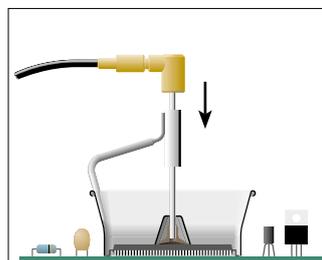


### 2. Heating

While you apply the heat on the component, the surrounding elements are protected.



### 3. Extracting

Automatic withdrawal of the desoldered component.

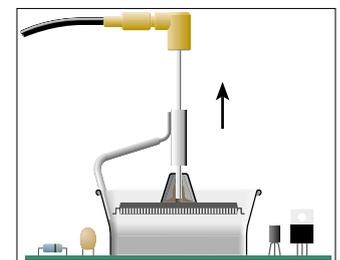


## Control the air flow and temperature

2 work modes to choose from




### Manual mode

In manual mode the operator can set temperature values and air flow rate depending on the task.

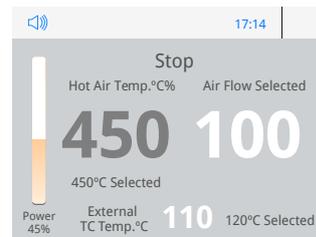

### Profile mode

In this mode the operator can set up or edit up to 25 dynamic profiles of temperature and air flow.

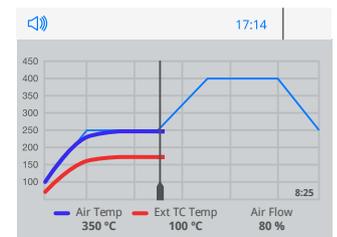

### Control thermocouple

Ref. **PH218**

Read the temperature at a specific point on the PCB.

It helps protect components and regulates the temperature by means of the profiles.



## Auto-stop function

**Hot Air Supports**  
Ref. **JT-SD** & **TE-SD**

### Safer and more profitable

The **auto-stop** function is a safety measure which guarantees the heat is automatically cut off when the tool is in the stand. This also means you save energy and extend the life of the tip.

### Auto-Start

When you select this function the tool automatically heats up when it is lifted from the stand.

### Pedal

When you select this function the tool will only heat up when the pedal is pressed.



### Adjustable holder

You can adjust the holder to suit your posture while working.



### Quick tip change

Changing the tip is done smoothly and quickly so you do not interrupt your rhythm.

# Communications

The Hot Air stations have different connectors so you can share data with other equipment.

**Widen your range of work!**



**Stand connection**  
JT-SD & TE-SD

**Auxiliary connection**

**Pedal P005-A**

**USB-B port**

The operator can supervise and manage the parameters of several stations with a computer (eg: the graphs of the work process). You only have to download JBC's management software and install it in your computer.  
Available at [www.jbctools.com](http://www.jbctools.com)

**ROBOT connector**

Connector RJ-12 for RS 232 connection using a protocol for robots. This option requires an external robotic connection where the robot manages the JBC control unit.



## Specifications

Dimensions	JT / TE	148 x 184 x 140 mm
Weight	JT	5.7 Kg (12.6 lb)
	TE	5.4 Kg (11.9 lb)
Ref. - Voltage (AC) / Fuse		<b>JTSE-1A / TESE-1A</b> - 120 V / 8A
		<b>JTSE-2A / TESE-2A</b> - 230 V / 4A
		<b>JTSE-9A / TESE-9A</b> - 100 V / 8A
Air flow rate	JT	10 - 50 SLPM
	TE	3 - 17 SLPM

Select Temperature	JT / TE	Room Temp. / 150 - 450 °C (300 - 840 °F)
Nominal power	JT	700 W
	TE	300 W
Ambiental temperature at the workbench	JT / TE	10 - 40 °C (50 - 104 °F)
Vacuum	JT / TE	30% / 228 mmHg / 9 inHg
Power	JT / TE	3A (230 V), 6A (120 V), 7A (100 V)

# Accessories

Choose the model to suit your needs

## Heater set Ref. **TE-TB**



## Ref. **JT-TA**



## Nozzles TE

	Ref.	Size (mm)
Bent	<b>TN9787</b>	Ø 3
	<b>TN9785</b>	Ø 4
	<b>TN9782</b>	Ø 5
Straight	<b>TN9209*</b>	Ø 3
	<b>TN9208*</b>	Ø 4
	<b>TN9080*</b>	Ø 5

\*Supplied with the TE desk

## Nozzles JT

	Ref.	Size (mm)
Bent	<b>JN2015*</b>	Ø 4
	<b>JN2012*</b>	Ø 6
	<b>JN6633</b>	Ø 8
Straight	<b>JN2020*</b>	Ø 8
	<b>JN8417</b>	Ø 10
Flat	<b>JN7638</b>	10 X 2
	<b>JN7637</b>	20 X 2
	<b>JN7639</b>	30 X 2

\*Supplied with the JT desk

## Protectors

	Ref.	Size (mm)
	<b>P3353</b>	4,3 x 3
	<b>P3786</b>	5,2 x 5,2
	<b>P3352</b>	5,2 x 7,5
	<b>P3355</b>	5,2 x 9,5
	<b>P3356</b>	6,2 x 4,2
	<b>P3785</b>	7,2 x 7,2
	<b>P3784</b>	8,2 x 8,2
	<b>P4035</b>	9 x 13
	<b>P4040</b>	9,5 x 19
	<b>P4080</b>	9,5 x 21

	Ref.	Size (mm)
	<b>P2220*</b>	10 x 10
	<b>P4045</b>	10,5 x 21
	<b>P4090</b>	11 x 16
	<b>P2235*</b>	12 x 17
	<b>P1249</b>	12 x 23
	<b>P4000*</b>	12,5 x 12,5
	<b>P1593</b>	13 x 31,5
	<b>P3354</b>	13,2 x 13,2
	<b>P4025</b>	13,5 x 21,5
	<b>P2230*</b>	15 x 15

	Ref.	Size (mm)
	<b>P4010*</b>	17 x 17
	<b>P4005</b>	18 x 29
	<b>P4030</b>	18,5 x 18,5
	<b>P1068</b>	18,5 x 24
	<b>P2685</b>	28,5 x 28,5
	<b>P4085</b>	31,5 x 31,5
	<b>P2672</b>	33 x 46
	<b>P4002</b>	50 x 50
	<b>P3357</b>	52,5 x 14

\*Supplied with the JT & TE desks

## Extractors

	Ref.	Size (mm)
	<b>E2052*</b>	20 x 20
	<b>E2064*</b>	20 x 26
	<b>E2184*</b>	24 x 24
	<b>E2068</b>	27 x 27
	<b>E4020</b>	28,5 x 28,5
	<b>E4015</b>	31,5 x 31,5
	<b>E2084</b>	33 x 33
	<b>E2100</b>	38 x 38
	<b>E2124</b>	45 x 45

\*Supplied with the JT & TE desks

## Tripods

	Ref.	Size (mm)
	<b>T2050*</b>	Ø 39
	<b>T2250*</b>	Ø 85

## Manual extractor

	Ref.	Size (mm)
	<b>E2190</b>	Ø 7



**Extractor Desk**  
Ref. **0008752**

## Why use an RWB?

It **supports** the Hot Air heater and leaves the operator free

It provides **full access** to the whole work area

## The Rework Arm for Hot Air stations

Ref. **RWB-A**

Once the arm has been fixed into position and the work profile has been set (temperature, air flow and time) in the Hot Air stations, the arm means you can fix the tool in place for when you need to repeat the operation for the same batch of PCBs.

### Vertical movement

Thanks to the multiple arm joints the height of the arm can be adjusted to suit all components whatever their size.



The **vertical movement**  
of the arm adapts to  
all your needs

### Rotating clamp

This holds the hose away from the work area  
to keep it clear of obstacles.

### Articulated arm

It facilitates access to the work area by  
fixing the position of the arm joints using the  
tightening knobs.



It has both clamps to fix  
the JT-TA & TE-TB heaters.

# Preheaters for PCBs

Obtain maximum quality in soldering without thermal stress

The most complete answer to pre-heating PCBs. There are **two** independent heating **areas** with **uniform** heat distribution.

## Infrared Preheater set

Ref. **PHS-1KB** 120 V, **PHS-2KB** 230 V, **PHS-9KB** 100 V

This is the complete answer to preheating **small** PCBs.

## Convection Preheater set


Ref. **PHB-1KA** 120 V, **PHB-2KA** 230 V, **PHB-9KA** 100 V

Essential for soldering in **multilayered circuits**.

## Preheater

Ref. **PHS-B**  
**PHB-A**

Designed to give maximum heating uniformity which guarantees the best results.

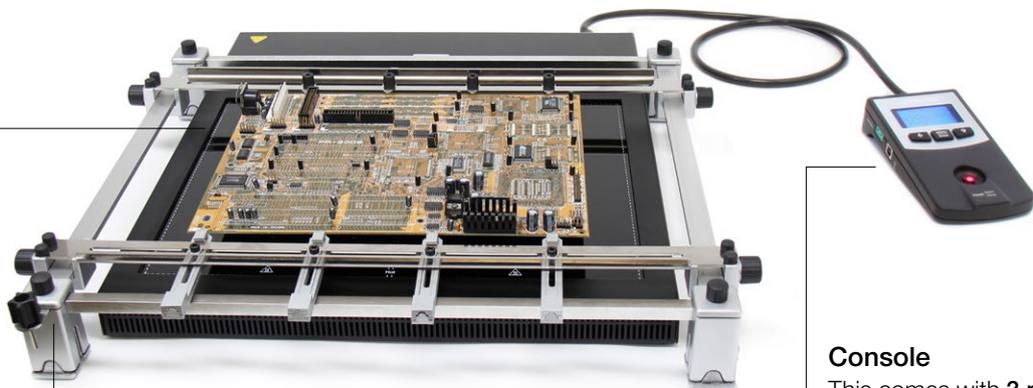

## Pre-heater support PHS-SA , PHB-SA

Ref. **PHS-SA**  
**PHB-SA**

It has different slots in the base which enable a correct alignment of the heater.

## Console

This comes with **3 pre-set temperature profiles** and 20 more which the operator can set depending on the task.

## Comparison between Preheaters

### Technical specifications

	<b>PHS-B</b>	<b>PHB-A</b>
Heating area	65 x 135 mm (1 zona) 130 x 135 mm (2 zonas)	180 x 277 mm (1 zona) 360 x 277 mm (2 zonas)
Voltage – maximum power	<b>PHS-1B</b> 120V, 50 / 60Hz - 500 VA <b>PHS-2B</b> 230V, 50 / 60Hz - 500 VA <b>PHS-9B</b> 100V, 50 / 60Hz - 500 VA	<b>PHB-1A</b> 120V, 50 / 60Hz - 1800 VA <b>PHB-2A</b> 230V, 50 / 60Hz - 2000 VA <b>PHB-9A</b> 100V, 50 / 60Hz - 1500 VA
Heating system	Infrared	Convection
Temperature range	50 - 250 °C (120 - 482 °F)	50 - 250 °C (120 - 482 °F)
Maximum work time	600 min. o indefinido	600 min. o indefinido
JBC set temperature profiles	3 profiles (2, 3 or 4 steps)	3 profiles (2, 3 or 4 steps)
Operator's temperature profiles	up to 20 (6 steps per profile)	hasta 20 (6 pasos por perfil)
Temperature measurement	Thermocouple type K	Thermocouple type K
Dimensions	173 x 282 x 41 mm	404 x 440 x 41 mm
Weight	2,9 kg (6.4 lb)	7,2 kg (15,9 lb)

